

# **ioPAC RTU Software User's Manual**

---

**First Edition, July 2013**

[www.moxa.com/product](http://www.moxa.com/product)



© 2013 Moxa Inc. All rights reserved.

# ioPAC RTU Software User's Manual

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

## Copyright Notice

© 2013 Moxa Inc. All rights reserved.

## Trademarks

The MOXA logo is a registered trademark of Moxa Inc.  
All other trademarks or registered marks in this manual belong to their respective manufacturers.

## Disclaimer

Information in this document is subject to change without notice and does not represent a commitment on the part of Moxa.

Moxa provides this document as is, without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. Moxa reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, Moxa assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.

This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

## Technical Support Contact Information

[www.moxa.com/support](http://www.moxa.com/support)

### **Moxa Americas**

Toll-free: 1-888-669-2872  
Tel: +1-714-528-6777  
Fax: +1-714-528-6778

### **Moxa Europe**

Tel: +49-89-3 70 03 99-0  
Fax: +49-89-3 70 03 99-99

### **Moxa India**

Tel: +91-80-4172-9088  
Fax: +91-80-4132-1045

### **Moxa China (Shanghai office)**

Toll-free: 800-820-5036  
Tel: +86-21-5258-9955  
Fax: +86-21-5258-5505

### **Moxa Asia-Pacific**

Tel: +886-2-8919-1230  
Fax: +886-2-8919-1231

# Table of Contents

<b>1. Introduction</b> .....	<b>1-1</b>
Overview .....	1-2
Scope .....	1-2
Related Documents .....	1-2
Supported Products .....	1-2
Software Architecture.....	1-2
Journaling Flash File System (JFFS2) .....	1-3
Software Package.....	1-4
<b>2. Getting Started</b> .....	<b>2-1</b>
Developing the First Program .....	2-2
Hardware and Software Requirements .....	2-2
Development Procedure .....	2-2
Configuring the Ethernet Interface .....	2-2
Modifying Network Settings with the Serial Console .....	2-2
Modifying Network Settings over the Network .....	2-3
Connect an RTU to a Linux PC .....	2-3
Install the Toolchain onto the PC .....	2-4
Set Cross Compiler & glibc Environment Variables .....	2-4
Develop Code & Compile the Program .....	2-4
Upload & Run the Program.....	2-5
<b>3. RTU Management</b> .....	<b>3-1</b>
System Information .....	3-2
Firmware Upgrade and Default Settings.....	3-2
Upgrading the Firmware.....	3-2
Recovering the Firmware.....	3-4
Loading Factory Defaults .....	3-5
Enabling and Disabling Daemons .....	3-5
Run-Level Settings.....	3-7
System Time Setting.....	3-8
Setting the Time Manually .....	3-8
Updating the Time with NTP Client.....	3-9
Updating the Time Automatically .....	3-9
NTP Server Setting .....	3-10
Executing Scheduled Commands with Cron Daemon .....	3-10
Software Lock .....	3-11
<b>4. RTU Communications</b> .....	<b>4-1</b>
Internet Configuration .....	4-2
Modbus TCP Master and Slave.....	4-2
DNS.....	4-2
Telnet/FTP .....	4-2
iptables .....	4-3
NAT (SNAT).....	4-7
Port Forwarding (DNAT) .....	4-9
PPP Dial-up Service .....	4-9
PPPoE .....	4-12
NFS (Network File System) Client.....	4-14
Sending Mail.....	4-14
OpenVPN.....	4-14
NTP Server/Client.....	4-18
Port Trunking .....	4-19
Serial Configuration .....	4-19
Modbus RTU Master .....	4-19
<b>5. RTU Data Acquisition</b> .....	<b>5-1</b>
I/O Data Access.....	5-2
Battery Backup SRAM.....	5-2
Millisecond Timestamp .....	5-2
Active OPC Server.....	5-2
<b>6. RTU Programming</b> .....	<b>6-1</b>
Programming Guide .....	6-2
Memory Usage .....	6-2
Using C/C++.....	6-2
Linux Toolchain .....	6-2
On-Line Debugging with GDB.....	6-4
Library and APIs.....	6-4
<b>A. System Commands</b> .....	<b>A-1</b>
File Manager .....	A-1

Editor .....	A-1
Network .....	A-2
Process .....	A-2
Other .....	A-2
Moxa Special Utilities .....	A-2

The following topics are covered in this chapter:

▣ **Overview**

- Scope
- Related Documents
- Supported Products

▣ **Software Architecture**

- Journaling Flash File System (JFFS2)
- Software Package

# Overview

This section introduces the scope of this document and lists related documents for reference.

## Scope

The purpose of this document is to help users set up and configure the ioPAC RTU and become familiar with the programming environment quickly. The following topics are covered in this document:

- **Introduction**
- **Getting Started**
- **RTU Management**
- **RTU Communications**
- **RTU Data Acquisition**
- **RTU Programming**

The following information is provided in the Appendix:

- **System Commands**

## Related Documents

Additional information about ioPAC RTU features is available in the following manuals, which can be found in the ioPAC RTU Documentation & Software CD.

- **ioPAC 8500 RTU Hardware User's Manual**
- **C/C++ Sample Code Programming Guide for ioPAC RTU Controllers**

## Supported Products

- **ioPAC 8500 Series**
- **ioPAC 5500 Series**

# Software Architecture

The ioPAC RTU controller uses an ARM9 based industrial grade CPU for the system and ARM Cortex™ M4 based CPUs for the modules. It provides up to 10 MB Flash ROM, 64 MB on-board SDRAM, and a microSD socket (up to 32 MB) for users to install application software and to store data directly on the controller.


The pre-installed operating system (OS) provides an open platform for software program development, which follows a standard Linux-based architecture. Software that runs on desktop PCs can be easily exported to the RTU controller with a cross compiler. Program porting can be done with the toolchain provided by Moxa.

The built-in flash ROM is partitioned into Boot Loader, Kernel, Root File System, and User directory partitions. In order to prevent user applications from crashing the Root File System, the RTU controller uses a unique Root File System with Protected Configuration for emergency use. This Root File System comes with serial and Ethernet communication capability for users to load the Factory Default Image file. User settings and applications are saved in the user directory.

To improve system reliability, the RTU controller has a built-in mechanism that prevents the system from crashing. When the kernel boots up, the RTU will mount the root file system in read-only mode, and then enable services and daemons. At the same time, the kernel will start searching for system configuration parameters via rc or inittab.

Normally, the kernel uses the Root File System to boot up the system. The Root File System is protected, and cannot be changed by users, which creates a safe zone for users.

For more information about the memory map and programming, refer to the **Programming Guide** section in Chapter 6.

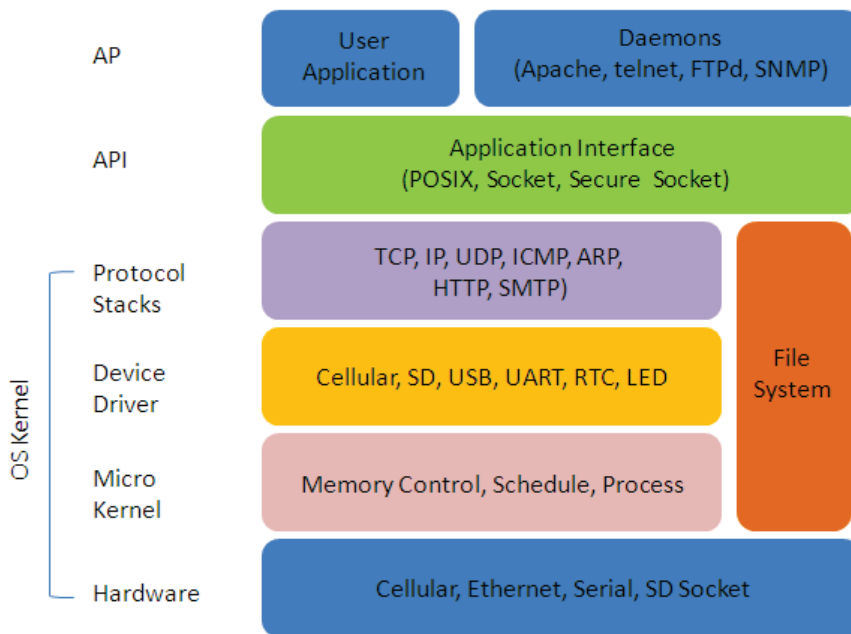

## Journaling Flash File System (JFFS2)

The Root File System and User directory in the flash memory is formatted with the Journaling Flash File System (JFFS2). The formatting process places a compressed file system in the flash memory. This operation is transparent to users.

The Journaling Flash File System (JFFS2), which was developed by Axis Communications in Sweden, puts a file system directly on the flash, instead of emulating a block device. It is designed for use on flash ROM chips and recognizes the special write requirements of a flash ROM chip. JFFS2 implements wear-leveling to extend the life of the flash disk, and stores the flash directory structure in the RAM. A log-structured file system is maintained at all times. The system is always consistent, even if it encounters crashes or improper power-downs, and does not require fsck (file system check) on boot-up.

JFFS2 is the newest version of JFFS. It provides improved wear-leveling and garbage-collection performance, improved RAM footprint and response to system-memory pressure, improved concurrency and support for suspending flash erases, marking of bad sectors with continued use of the remaining good sectors (enhancing the write-life of the devices), native data compression inside the file system design, and support for hard links.

The key features of JFFS2 are:

- Targets the flash ROM directly
- Robustness
- Consistency across power failures
- No integrity scan (fsck) is required at boot time after normal or abnormal shutdown
- Explicit wear leveling
- Transparent compression

Although JFFS2 is a journaling file system, this does not preclude the loss of data. The file system will remain in a consistent state across power failures and will always be mountable. However, if the system is powered down during a write, then the incomplete write will be rolled back on the next boot, but writes that have already been completed will not be affected.

**Additional information about JFFS2 is available at:**

<http://sources.redhat.com/jffs2/jffs2.pdf>

<http://developer.axis.com/software/jffs/>

<http://www.linux-mtd.infradead.org/>

## Software Package

<b>Boot Loader</b>	Moxa Boot Loader (v1.0)
<b>Kernel</b>	Linux 2.6.38
<b>Protocol Stack</b>	ARP, PPP, CHAP, PAP, IPv4, ICMP, TCP, UDP, DHCP, FTP, HTTP, NTP, NFS, SMTP, SSH 1.0/2.0, SSL, Telnet, PPPoE, OpenVPN, TFTP
<b>File System</b>	JFFS2, NFS, Ext2, Ext3, VFAT/FAT
<b>OS shell command</b>	Bash
Busybox	Linux normal command utility collection
<b>Utilities</b>	
tinylogin	Login and user manager utility
telnet	Telnet client program
ssh	SSH client program
ftp	FTP client program
smtpclient	Email utility
ntpd	NTP client program
tftp	TFTP client program
ddns	NO-IP client program
<b>Daemons</b>	
pppd	Dial in/out over serial port daemon
telnetd	Telnet server daemon
inetd	TCP server manager program
ftpd	FTP server daemon
sshd	Secure shell server
openvpn	Virtual private network
openssl	Open SSL
ntpd	NTP server daemon
<b>Linux Toolchain</b>	
Gcc (V4.4.2)	C/C++ PC Cross Compiler
GDB (V7.0.1)	Source Level Debug Server
Glibc(V2.10.1)	POSIX standard C library



# 2

## Getting Started

---

This chapter is intended as a quick start guide to help new users set up and configure the ioPAC RTU controller quickly, and develop a simple program to run on the ioPAC RTU controller.

The following topics are covered in this chapter:

- ❑ **Developing the First Program**
  - Hardware and Software Requirements
  - Development Procedure
- ❑ **Configuring the Ethernet Interface**
  - Modifying Network Settings with the Serial Console
  - Modifying Network Settings over the Network
- ❑ **Connect an RTU to a Linux PC**
- ❑ **Install the Toolchain onto the PC**
- ❑ **Set Cross Compiler & glibc Environment Variables**
- ❑ **Develop Code & Compile the Program**
- ❑ **Upload & Run the Program**

# Developing the First Program

This section lists the minimum hardware and software requirements, and gives an overview of program development procedures.

## Hardware and Software Requirements

The following hardware items are required to complete the first program.

- ❑ 1 x ioPAC RTU controller
- ❑ 1 x 9-48VDC power supply
- ❑ 1 x Ethernet cable
- ❑ 1 x PC or Laptop with following minimum requirements
  - CPU: Intel Pentium 4 or above
  - RAM: 512 MB (1024 MB recommended)
  - HDD: at least 200 MB of free space
  - Network Interface: 10/100M Ethernet
  - Linux Operating System (Debian 6.0.1, Ubuntu 11.04 or Fedora Core 15 are recommended)

## Development Procedure

Follow the steps below to complete the first program development.

Step 1: Connect an RTU to a Linux PC

Step 2: Install the Toolchain onto the PC

Step 3: Set Cross Compiler & glibc Environment Variables

Step 4: Develop Code & Compile the Program

Step 5: Upload & Run the Program

## Configuring the Ethernet Interface

The network settings of the ioPAC RTU controller can be modified with the serial console, or online over the network.

## Modifying Network Settings with the Serial Console

In this section, we use the serial console to configure network settings of the ioPAC.

First, use the command

```
#cd /etc/network
```

to change to the directory where the network's configuration files are located.

```
root@Moxa:~# cd /etc/network/  
root@Moxa:/etc/network/#
```

Call up the vi text editor to begin editing the interfaces configuration file by typing:

```
#vi interfaces
```

You can configure the ioPAC RTU controller's Ethernet ports for static or dynamic (DHCP) IP addresses.

**Static IP addresses:**

As shown below, 2 network addresses need to be modified: address, network, netmask, and broadcast.

The default IP addresses are 192.168.127.254 for LAN1 and 192.168.126.254 for LAN2, with default netmasks of 255.255.255.0.

```
# We always want the loopback interface.

auto eth0 eth1 lo
#auto eth0 lo
iface lo inet loopback

iface eth0 inet static
    address 192.168.127.254
    network 192.168.127.0
    netmask 255.255.255.0
    broadcast 192.168.127.255
    gateway 192.168.127.1

# embedded ethernet LAN2
iface eth1 inet static
    address 192.168.126.254
    network 192.168.126.0
    netmask 255.255.255.0
    broadcast 192.168.126.255
    gateway 192.168.126.1
```

**Dynamic IP Addresses:**

By default, the ioPAC RTU is configured for "static" IP addresses. To configure LAN ports to request an IP address dynamically, replace **static** with **dhcp** and then delete the address, network, netmask, and broadcast lines.

```
Auto eth0 eth1 lo

iface lo inet loopback
iface eth0 inet dhcp
iface eth1 inet dhcp
```

## Modifying Network Settings over the Network

IP settings can be activated over the network, but the new settings will not be saved to the flash ROM without modifying the file `/etc/network/interfaces`.

For example, type the command `#ifconfig eth0 192.168.127.1` to change the IP address of LAN1 to 192.168.127.1.

```
root@Moxa:~# ifconfig eth0 192.168.127.1
root@Moxa:~#
```

**NOTE** You can use the **ipset** command to directly configure the settings and save them to the flash ROM, and the **route** table to debug any issues when configuring over an Ethernet connection.

## Connect an RTU to a Linux PC

Follow the steps below to establish the connection between the PC and the RTU.

**Step 1:** Connect the PC Ethernet connector to LAN1 or LAN2 of the ioPAC RTU with an Ethernet cable.

**Step 2:** Change the IP address of the PC as follows:

Connected to ioPAC RTU LAN Port	Set PC's IP address
LAN1 (default IP: 192.168.127.254)	192.168.127.100

LAN2 (default IP: 192.168.126.254)	192.168.126.100
------------------------------------	-----------------

**Step 3:** Use the **telnet** command to access the console of the RTU controller.

```
root@localhost:~# telnet 192.168.127.254
```

**Step 4:** If successfully connected to the RTU controller, the following message will be shown on the screen. Close this connection to return to the local PC.

```
root@localhost:~# telnet 192.168.127.254
Trying 192.168.127.254...
Connected to 192.168.127.254.
Escape character is '^J'.

Moxa login:
```

## Install the Toolchain onto the PC

The RTU controller's GNU toolchain requires approximately 150 MB of hard disk space on your PC. The RTU controller's toolchain software is located on the Document and Software CD. To install the toolchain, insert the CD into your PC's CD-ROM and then issue the following commands:

```
root@localhost:~# mount /dev/cdrom /mnt/cdrom
root@localhost:~# sh /mnt/cdrom/Software/Toolchain/arm-linux_Vx.x.sh
```

The toolchain will be installed automatically on the host Linux PC within a few minutes.

## Set Cross Compiler & glibc Environment Variables

Before compiling the program, be sure to set the following path first, since the toolchain files (including the compiler, link, and library) are located in this directory. Setting the path allows you to run the compiler from any directory.

```
root@localhost:~# PATH=/usr/local/arm-linux/bin:$PATH
```

## Develop Code & Compile the Program

The Software and Document CD contains a sample **hello\_world.c** program and makefile for users to run pilot tests to the RTU controller.

Type the following commands for the host PC to copy the files used for this example.

```
root@localhost:~# cd /tmp/
root@localhost:/tmp# mkdir example
root@localhost:/tmp# cp -r /mnt/cdrom/Software/Sample/hello_world/* /tmp/example
```

To compile the program, go to the **hello\_world** subdirectory and issue the following commands:

```
root@localhost:~# cd/tmp/example/hello_world
root@localhost:/tmp/example/hello_world# make
```

The following response should be shown on the screen.

```
root@localhost:/tmp/example/hello_world# make
/usr/local/arm-linux/bin/arm-linux-gcc -I/usr/local/arm-linux/include
-I/usr/local/arm-linux/include/RTU -o hello_world hello_world.o
-L/usr/local/arm-linux/lib -lpthread -lmxml -L/usr/local/arm-linux/lib/RTU
-lmoxa_rtu -lrtu_common -ltag -Wl,-rpath,/lib/RTU/ -Wl,--allow-shlib-undefined
```

The `hello_world-release` and `hello_world-debug` executable files are described as below:

- `hello_world-release`: an ARM platform executable file (created specifically to run on the Moxa RTU Controllers)
- `hello_world-debug`: an ARM platform GDB debug server executable file

**NOTE** Since Moxa's toolchain places a specially designed makefile in the `/tmp/example/hello_world` directory, be sure to type the `#make` command from within that directory. If users type the `#make` command from any other directory, the host Linux PC may use other system compilers (e.g., `cc` or `gcc`) and result in errors.

## Upload & Run the Program

Follow the steps below to upload and run the `hello_world.c` program.

**Step 1:** Use the `telnet` command to access the console of the RTU controller.

```
root@localhost:~# telnet 192.168.127.254
```

**Step 2:** Enter `root` for both the `account` and `password`.

**Step 3:** Before uploading the compiled program to the RTU controller, check the free space of the flash memory on the RTU controller. If the flash memory is full, you cannot save data to the flash ROM. Use the following command to calculate the amount of available flash memory.

```
root@Moxa:~# df -h
```

**NOTE** If there is not enough available space for user's program, users must delete some existing files.

**Step 4:** Use the following commands to connect the FTP server of the RTU controller.

```
root@localhost:/tmp/example/hello_world# ftp 192.168.127.254
```

**Step 5:** Enter `root` for both the `account` and `password`.

**Step 6:** Use the following commands to upload `hello_world-release` to the RTU controller by FTP in Binary mode

```
ftp> cd /home
ftp> put hello_world
```

**Step 7:** Use the following commands to run the `hello_world` program on the RTU controller.

```
root@Moxa:/home~# chmod +x hello_world
root@Moxa:/home~# ./hello_world
```

To run the program automatically after the system starts, modify the **/home/autoexec.sh** file as follows.

```
#!/bin/sh
#
# This script will be executed in rd.local.
Echo "Load user's script from /home/autoexec.sh"

/home/hello_world
```

## RTU Management

---

This chapter discusses version control, deployment, updates, and peripherals. The information in this chapter will be particularly useful when you need to run the same application on multiple ioPAC RTU controllers.

The following topics are covered in this chapter:

- ❑ **System Information**
- ❑ **Firmware Upgrade and Default Settings**
  - Upgrading the Firmware
  - Recovering the Firmware
  - Loading Factory Defaults
- ❑ **Enabling and Disabling Daemons**
- ❑ **Run-Level Settings**
- ❑ **System Time Setting**
  - Setting the Time Manually
  - Updating the Time with NTP Client
  - Updating the Time Automatically
  - NTP Server Setting
- ❑ **Executing Scheduled Commands with Cron Daemon**
- ❑ **Software Lock**

# System Information

To determine the hardware capability of your ioPAC RTU controller and supported software functions, check the version numbers of your ioPAC RTU hardware, kernel, and user file system. When contacting Moxa to determine the hardware version, you will need the Production S/N (serial number), which is located on the ioPAC's bottom label.

To check the kernel version, type:

**#kversion**

```
root@Moxa:~# kversion
RTU Version 1.2.0
root@Moxa:~#
```

**NOTE** The kernel version number is used for the factory default configuration. You may download the latest firmware version from Moxa's website and then upgrade the ioPAC RTU hardware.

## Firmware Upgrade and Default Settings

### Upgrading the Firmware

The ioPAC RTU bios, kernel, and root file system are combined into one firmware file, which can be downloaded from Moxa's website [www.moxa.com](http://www.moxa.com). The name of the file has the form **FWR\_ioPAC\_x\_x\_x.hfm**, with "x\_x\_x" indicating the firmware version. To upgrade the firmware, download the firmware file to a PC, and then transfer the file to the ioPAC RTU using a console port or Telnet console connection.



#### ATTENTION

##### Upgrading the firmware will erase all data on the flash ROM

If you are using the RAM disk to store code for your applications, beware that updating the firmware will erase all of the data on the flash ROM. You should back up your application files and data before updating the firmware.

Since different flash disks have different sizes, it is a good idea to check the size of your flash disk before upgrading the firmware, or before using the disk to store your application and data files. Use the **#df -h** command to list the size of each memory block and how much free space is available in each block.

```
Filesystem      Size      Used Available Use% Mounted on
/dev/root      16.0M      8.2M      7.8M  51% /
/dev/ram0      499.0K     16.0K     458.0K   3% /var
/dev/ram7        2.0M     15.0K      1.8M   1% /dev
/dev/mtdblock3  12.0M    632.0K     11.4M   5% /tmp
/dev/mtdblock3  12.0M    632.0K     11.4M   5% /home
/dev/mtdblock3  12.0M    632.0K     11.4M   5% /etc
tmpfs          29.8M         0     29.8M   0% /dev/shm
root@Moxa:/# upramdisk
root@Moxa:/# df -h
Filesystem      Size      Used Available Use% Mounted on
/dev/root      16.0M      8.2M      7.8M  51% /
/dev/ram0      499.0K     17.0K     457.0K   4% /var
/dev/ram7        2.0M     15.0K      1.8M   1% /dev
/dev/mtdblock3  12.0M    632.0K     11.4M   5% /tmp
/dev/mtdblock3  12.0M    632.0K     11.4M   5% /home
/dev/mtdblock3  12.0M    632.0K     11.4M   5% /etc
tmpfs          29.8M         0     29.8M   0% /dev/shm
/dev/ram1       31.9M    395.0K     29.9M   1% /var/ramdisk
root@Moxa:~#
```

Follow the steps below to save the firmware file to the ioPAC RTU controller's RAM disk and upgrade the firmware.



1. Type the following commands to enable the RAM disk:

```
#upramdisk
#cd /mnt/ramdisk
```

2. Type the following commands to use the ioPAC RTU controller's built-in FTP client to transfer the firmware file (**FWR\_ioPAC\_x\_x\_x.hfm**) from the PC to the ioPAC RTU:

```
/mnt/ramdisk> ftp <destination PC's IP> Login Name: xxxx
Login Password: xxxx
ftp> bin
ftp> get FWR_ioPAC_x_x_x.hfm
```

```
root@Moxa:~# ftp 192.168.127.3
Connected to 192.168.127.3.
220- Welcome to Rainbow FTP-G Server FREEWARE Edition.
220 *** For Personal Use Only!! ***
Name (192.168.127.3:root): root
331 Password required for root
Password:
230 User successfully logged in.
Remote system type is UNIX.
ftp> bin
200 Type set to BINARY
ftp> ls
200 Port command successful.
150 Opening ASCII mode data connection for directory list.
-rwx----- 1 user group      140856793 Apr 19 16:11 arm-linux_V1.0_Build2013041916.sh
-rwx----- 1 user group        6158672 Jan 11 10:31 FTP-G_x64.exe
-rwx----- 1 user group      10053852 Apr 17 19:09 FWR_ioPAC8500_V1.1_Build13041719_STD.hfm
226 Transfer complete
ftp> get FWR_ioPAC8500_V1.1_Build13041719_STD.hfm /home/
FWR_ioPAC8500_V1.1_Build13041719_STD.hfm
local: /home/FWR.hfm remote: FWR_ioPAC8500_V1.1_Build13041719_STD.hfm
200 Port command successful.
150 Opening BINARY mode data connection for file transfer.
226 Transfer complete.
10053852 bytes received in 81.2 secs (1.2e+02 kbytes/sec)
ftp>
```

3. Next, use the **upgrahfm** command to upgrade the kernel and root file system.

```
# upgrahfm FWR_ioPAC_x_x_x.hfm
```

```
root@Moxa:/mnt/ramdisk# upgrahfm FWR_ioPAC8500_V1.1_Build13041719_STD.hfm
root@Moxa:/home# upgrahfm FWR_ioPAC8500_V1.1_Build13041719_STD.hfm
Upgrade firmware utility version 1.1.
To check source firmware file context.
The source firmware file context is OK.
This step will destroy all your firmware.
Continue ? (Y/N) :

Now upgrade the file [KERNEL_ioPAC-8500].
Format MTD device [/dev/mtd1] ...
MTD device [/dev/mtd1] erase 128 Kibyte @ 380000 -- 100% complete.
Wait to write file ...
Completed 100%

Now upgrade the file [ROOTFS_ioPAC-8500].
Format MTD device [/dev/mtd2] ...
MTD device [/dev/mtd2] erase 128 Kibyte @ 1000000 -- 100% complete.
Wait to write file ...
Completed 100%

Now upgrade the file [85M-5401] for slot module

Now upgrade the file [85M-3811] for slot module

Now upgrade the file [85M-3810] for slot module

Now upgrade the file [85M-3801] for slot module
```

```
Now upgrade the file [85M-3800] for slot module
```

```
Now upgrade the file [85M-2600] for slot module
```

```
Now upgrade the file [85M-1602] for slot module
```

**NOTE** The firmware upgrade contains the I/O modules firmware. If there is no compatible I/O modules installed, it will automatically skip the I/O module firmware upgrading procedure.

## Recovering the Firmware

If the ioPAC RTU fails to boot up normally, the device firmware may be corrupt.

Follow the steps below to recover the device firmware:

1. Run a TFTP server on your PC.
2. Put the ioPAC RTU firmware file in the root folder of the TFTP server.
3. Power off the ioPAC RTU controller.
4. Connect the ioPAC RTU controller to the PC to the console port with a console cable, and to the LAN1 port with an Ethernet cable.
5. Start a terminal program (e.g., PComm) with the settings: Baudrate 115200, no hardware flow control, 8 N 1; character set VT100.
6. Hold down the ESC key on your PC keyboard.
7. Power on the ioPAC RTU controller. You will be guided to the boot loader utility menu as shown below:

```
=====
=====
( 1) Network Configuration          ( 2) Format User Disk
( 3) Firmware Upgrade              ( 4) Reboot
=====
=====
Command>>3
```

8. Press 1 to configure the Network (e.g., TFTP server IP address and ioPAC RTU IP address).
9. Press 3 to upgrade the ioPAC RTU controller firmware.
10. Press 1 to select **Load from LAN** and then type the firmware filename to upgrade the device firmware.

```
=====
=====
( 1) Load from LAN                  ( 2) Load from serial with Xmodem
=====
=====
Command>>1
Please input load file name..
Default file name : RTU.hfm
User Input file name : RTU.hfm

Initializing network ...OK
Search TFTP Server...OK
Using default protocol (TFTP)
Ready to receive RTU.hfm
frm_headerlength : [0x5c]
frm_header_version : [0x2000000]
frm_modelname : [RTU]
frm_totallength : [0x96eed0]
frm_checksum : [0xe2c36f1f]
```

```

frm_totalfileno : [0x3]
frm_apidno : [0x1]
frm_APID : [0x80000189]

file_filename : [KERNEL_ioPAC-8500]
file_filelength : [1c7a74]
file_checksum : [65246529]
file_flashstart : [80080000]
file_flashend : [80400000]
file_flashlength : [380000]
file_DRAMstartaddr : [0]
file_mtdno : [1]
file_version : [260602]
Erase flashrom 0x80080000-0x800a0000 ..OK

```

11. After completing the upgrade process, power cycle the ioPAC RTU.

## Loading Factory Defaults

Use the following procedure to reset the ioPAC to the factory defaults. Note that when you reset the ioPAC, all of your tag definitions, software programs, and files will be deleted, and the service and runtime engine will be restarted.

1. When the system is booting up and the **RDY** LED is blinking GREEN, hold the toggle switch in the RESET position.
2. Continue to hold toggle switch until the **RDY** LED turns a solid RED, and then release the toggle switch. It will take around 90 seconds to complete the factory reset process.
3. When the **RDY** LED starts blinking GREEN (indicating that the kernel is rebooting), the factory mode is completed.

## Enabling and Disabling Daemons

The following daemons are enabled when the ioPAC RTU controller boots up for the first time.

**snmpd** SNMP Agent daemon  
**telnetd** Telnet Server / Client daemon  
**inetd** Internet Daemons  
**ftpd** FTP Server / Client daemon  
**sshd** Secure Shell Server daemon  
**httpd** Apache WWW Server daemon

Type the **ps** command to list all processes currently running.

```

root@Moxa:/# cd /etc
root@Moxa:/etc# ps
  PID USER     VSZ STAT COMMAND
    1 root      1868 S   init [3]
    2 root         0 SW   [kthreadd]
    3 root         0 SW   [ksoftirqd/0]
    4 root         0 SW   [kworker/0:0]
    5 root         0 SW   [kworker/u:0]
    6 root         0 SW   [rcu_kthread]
    7 root         0 SW<  [khelper]
    8 root         0 SW   [sync_supers]
    9 root         0 SW   [bdi-default]
   10 root         0 SW<  [kblockd]
   11 root         0 SW   [khubd]
   12 root         0 SW<  [rpciod]
   13 root         0 SW   [kswapd0]
   14 root         0 SW   [kworker/0:1]
   15 root         0 SW   [fsnotify_mark]

```

```

16 root      0 SW<  [aio]
17 root      0 SW<  [nfsiod]
18 root      0 SW<  [crypto]
23 root      0 SW    [mtdblock0]
24 root      0 SW    [mtdblock1]
25 root      0 SW    [mtdblock2]
26 root      0 SW    [mtdblock3]
27 root      0 SW    [kworker/u:1]
44 root      0 SW    [flush-1:0]
45 root      0 SW    [flush-1:7]
49 root      0 SWN   [jffs2_gcd_mtd3]
106 root     2816 S   /usr/sbin/inetd
113 root     4208 S   /sbin/sshd
117 root     2872 S   /bin/sh /bin/rtu_agent
120 root     45440 S  /bin/rtu_agent_bin
125 root     2920 S   /bin/sh --login
131 root     6824 S   sshd: root@tty0
137 root     2924 S   -bash
139 root     2740 R   ps
root@Moxa:/ect#

```

To run a private daemon, you can edit the **rc.local** file, as follows:

```

#cd /etc
#vi rc.local

```

```

root@Moxa:~# cd /etc/
root@Moxa:~# /etc/rc.d# vi rc.local

```

Next, use the **vi** command to open your application program. In this example, we use the **hello\_world.c** program and let it run in the background.

```

# !/bin/sh
if [ -f /home/autoexec.sh ]; then
/home/autoexec.sh
fi
# Add the new daemons or programs starting from the next line
/home/hello_world &~

```

The enabled daemons will be available after you reboot the system.

```

root@Moxa:~# ps
PID USER      VSZ STAT COMMAND
  1 root        1868 S   init [3]
  2 root         0 SW   [kthreadd]
  3 root         0 SW   [ksoftirqd/0]
  4 root         0 SW   [kworker/0:0]
  5 root         0 SW   [kworker/u:0]
  6 root         0 SW   [rcu_kthread]
  7 root         0 SW<  [khelper]
  8 root         0 SW   [sync_supers]
  9 root         0 SW   [bdi-default]
 10 root         0 SW<  [kblockd]
 11 root         0 SW   [khubd]
 12 root         0 SW<  [rpciod]
 13 root         0 SW   [kswapd0]
 14 root         0 SW   [kworker/0:1]
 15 root         0 SW   [fsnotify_mark]
 16 root         0 SW<  [aio]
 17 root         0 SW<  [nfsiod]
 18 root         0 SW<  [crypto]
 23 root         0 SW   [mtdblock0]
 24 root         0 SW   [mtdblock1]
 25 root         0 SW   [mtdblock2]
 26 root         0 SW   [mtdblock3]
 27 root         0 SW   [kworker/u:1]
 49 root         0 SWN   [jffs2_gcd_mtd3]
106 root     2816 S   /usr/sbin/inetd
113 root     4208 S   /sbin/sshd
117 root     2872 S   /bin/sh /bin/rtu_agent
120 root     45440 S  /bin/rtu_agent_bin

```

```

125 root    2920 S    /bin/sh --login
131 root    6824 S    sshd: root@tty0
137 root    2924 S    -bash
159 root    2740 S    /usr/sbin/telnetd
160 root    2920 S    -bash
161 root          0 SW    [flush-1:7]
164 root    1848 S    ./ hello_world
171 root    6824 S    sshd: root@tty2
177 root    2924 S    -bash
178 root    2740 R    ps
root@Moxa:~#

```

## Run-Level Settings

In this section, we outline the steps you should take to set the Linux run-level and execute requests. The run-level for the ioPAC RTU controller is 3. Use the following command to enable or disable settings:

```

root@Moxa:/etc/rc.d/rc3.d# ls
S19nfs-common S25nfs-user-server S99showreadyled
S20snmpd S55ssh
S24pcmcia S99rmnologin
root@Moxa:/etc/rc.d/rc3.d#

```

```
#cd /etc/rc.d/init.d
```

Edit a shell script to execute **/home/tcps2-release** and save to **tcps2** as follows:

```
#cd /etc/rc.d/rc3.d
#ln -s /etc/rc.d/init.d/tcps2 S60tcps2
```

SxxRUNFILE stands for

S: start the run file while Linux boots up.

xx: a number between 00-99. Smaller numbers have a higher priority.

RUNFILE: the file name.

```

root@Moxa:/etc/rc.d/rc3.d# ls
S19nfs-common S25nfs-user-server S99showreadyled
S20snmpd S55ssh
S24pcmcia S99rmnologin
root@Moxa:/etc/rc.d/rc3.d# ln -s /home/tcps2-release S60tcps2
root@Moxa:/etc/rc.d/rc3.d# ls
S19nfs-common S25nfs-user-server S99rmnologin
S20snmpd S55ssh S99showreadyled
S24pcmcia S60tcps2
root@Moxa:/etc/rc.d/rc3.d#

```

KxxRUNFILE stands for

K: start the run file while linux shuts down or halts.

xx: a number between 00-99. Smaller numbers have a higher priority.

RUNFILE: the file name.

To remove the daemon, remove the run file from the **/etc/rc.d/rc3.d** directory by using the following command:

```
#rm -f /etc/rc.d/rc3.d/S60tcps2
```

**NOTE** Level **rc3.d** has a higher priority than **rc.local**, so **rc3.d** will execute before **rc.local**.

# System Time Setting

## Setting the Time Manually

The ioPAC RTU controller has two time settings. One is the system time, and the other is the RTC (Real Time Clock) time kept by the ioPAC hardware. Use the **#date** command to query the current system time or set a new system time. Use **#hwclock** to query the current RTC time or set a new RTC time.

Use the following command to query the system time:

**#date**

Use the following command to query the RTC time:

**#hwclock**

Use the following command to set the system time:

**#date YYYYMMDDhhmm**

MM = Month

DD = Date

hhmm = hour and minute

YYYY = Year

Use the following command to set the RTC time:

**#hwclock -w**

Write current system time to RTC

The following figure illustrates how to update the system time and set the RTC time.

```
root@Moxa:/# date
Fri May 10 02:35:39 UTC 2013
root@Moxa:/# hwclock
Fri May 10 02:35:43 2013  0.000000 seconds
root@Moxa:/# date 201305101037
Fri May 10 10:37:00 UTC 2013
root@Moxa:/# hwclock -w
root@Moxa:/# date ; hwclock
Fri May 10 10:37:32 UTC 2013
Fri May 10 10:37:32 2013  0.000000 seconds
root@Moxa:/#
```

## Updating the Time with NTP Client

The ioPAC RTU controller has a built-in NTP (Network Time Protocol) client that is used to initialize a time request to a remote NTP server. Use `#ntpdate <this client utility>` to update the system time.

```
#ntpdate time.stdtime.gov.tw
```

```
#hwclock -w
```

Visit <http://www.ntp.org> for more information about NTP and NTP server addresses.

```
root@Moxa:/# date ;hwclock
Fri May 10 10:50:54 CST 2013
Fri May 10 02:50:53 2013 0.000000 seconds
root@Moxa:/# ntpdate time.stdion.gov.tw
10 May 10:51:03 ntpdate[156]: adjust time server 192.168.50.33 offset 0.007500 sec
root@Moxa:/# hwclock -w
root@Moxa:/# date ;hwclock
Fri May 10 10:51:17 CST 2013
Fri May 10 10:51:16 2013 0.000000 seconds
root@Moxa:/#
```

Add the command line to the `vi/etc/profile` directory to change the time zone. For example, **export TZ=CST-8.**

**NOTE** Before using the NTP client utility, check your IP and DNS settings to make sure that an Internet connection is available. Refer to Chapter 2 for instructions on how to configure the Ethernet interface, and see Chapter 4 for DNS settings information.

## Updating the Time Automatically

This section demonstrates how to use a shell script to update the time automatically.

### Example shell script to update the system time periodically

```
#!/bin/sh
ntpdate time.nist.gov
# You can use the time server's ip address or domain
# name directly. If you use domain name, you must
# enable the domain client on the system by updating
# /etc/resolv.conf file.
hwclock --systohc
sleep 100
# Updates every 100 seconds. The min. time is 100 seconds. Change
# 100 to a larger number to update RTC less often.
```

Save the shell script using any file name (e.g., `fixtime`)

### How to run the shell script automatically when the kernel boots up

Copy the above example shell script `fixtime` to directory `/etc/init.d`, and then use `chmod 755 fixtime` to change the shell script mode. Next, use `vi` editor to edit the file `/etc/inittab`. Add the following line to the bottom of the file:

```
ntp : 2345 : respawn : /etc/init.d/fixtime
```

Use the command `#init q` to re-init the kernel.

## NTP Server Setting

The ioPAC RTU controller has an NTP server setting. First, configure the time sync server at the path `/etc/ntp.conf` and use the `/etc/init.d/ntpd start` command to start the NTP server.

```
root@Moxa:/etc# /etc/init.d/ntpd start
Starting ntp server
```

Use the `ntpq -pn` command to check the NTP server status, and `ntpd -g -l /etc/ntp_log &` to debug the NTP server.

**NOTE** `ntpd` and `ntpddate` cannot be used at the same time because the UDP port 123 will be occupied. Remember to use `hwclock-w` to update the RTC time, or else the time sync settings will be lost after you restart the device.

## Executing Scheduled Commands with Cron Daemon

Start `cron` from the `/etc/rc.d/rc.local` directory. It will return immediately, so you don't need to start it with `'&'` to run in the background.

The Cron daemon will search `/etc/cron.d/crontab` for crontab files, which are named after accounts in `/etc/passwd`.

Cron wakes up every minute, and checks each command to see if it should be run that minute. Modify the file `/etc/cron.d/crontab` to set up your scheduled applications. Crontab files have the following format:

mm	h	dom	mon	dow	user	command
min	hour	date	month	week	user	command
0-59	0-23	1-31	1-12	0-6 (0 is Sunday)		

The following example demonstrates how to use `cron`.

### How to use cron to update the system time and RTC time every day at 8:00

**Step 1:** Write a shell script named `fixtime.sh` and save it to `/home/`.

```
#!/bin/sh
ntpdate time.nist.gov
hwclock -w
exit 0
```

**Step 2:** Change the `fixtime.sh` mode.

```
#chmod 755 fixtime.sh
```

**Step 3:** Modify the `/etc/cron.d/crontab` file to run `fixtime.sh` at 8:00 every day.

Add the following line to the end of crontab:

```
* 8 * * * root/home/fixtime.sh
```

**Step 4:** Enable the `cron` daemon manually.

```
#/etc/init.d/crond start
```

**Step 5:** Enable `cron` when the system boots up.

Add the following line in the `/etc/rc.d/rc.local` file

```
#/etc/init.d/crond start
```



# Software Lock

**Software Lock** is an innovative technology developed by the Moxa engineering team. It can be adopted by a system integrator or developer to protect his/her applications from being copied. An application is compiled into a binary format bound to the ioPAC RTU and the operating system (OS) that the application runs on. So as long as the application is obtained from the development PC, it can be installed on the same hardware and the same operating system, resulting in a loss of the add-on value created by the developer.

Moxa's engineers used data encryption to develop this protection mechanism for your applications. The binary file associated with each of your applications needs to undergo an additional encryption process after you have developed it. The process requires you to install an encryption key on the ioPAC RTU.

1. Choose an encryption key (e.g., "ABigKey") and install it on the ioPAC RTU controller using the pre-loaded **setkey** utility program.

```
#setkey ABigKey
```

**NOTE:** set an empty string to clear the encryption key on the ioPAC RTU controller by:

```
#setkey ""
```

2. Develop and compile your program in the development PC.
3. On the development PC, run the **binencryptor** utility program to encrypt your program with an encryption key.

```
#binencryptor yourProgram ABigKey
```

4. Upload the encrypted program file to the ioPAC RTU by FTP or NFS and test the program.

The encryption key is a computer-wise key. That is to say, an ioPAC RTU has only one key installed. Running the **setkey** program multiple times overrides the existing key.

To prove the effectiveness of this software protection mechanism, prepare an ioPAC RTU that has not been installed an encryption key or install a key different from that used to encrypt your program. In any case, the encrypted program fails immediately.

This mechanism also allows an ioPAC RTU with an encryption key to bypass programs that are not encrypted, and is useful in developing and testing programs on the ioPAC RTU.

# RTU Communications

---

In this chapter, we explain how to configure the ioPAC RTU various communication functions.

The following topics are covered in this chapter:

## ❑ Internet Configuration

- Modbus TCP Master and Slave
- DNS
- Telnet/FTP
- iptables
- NAT (SNAT)
- Port Forwarding (DNAT)
- PPP Dial-up Service
- PPPoE
- NFS (Network File System) Client
- Sending Mail
- OpenVPN
- NTP Server/Client
- Port Trunking

## ❑ Serial Configuration

- Modbus RTU Master

# Internet Configuration

## Modbus TCP Master and Slave

Modbus TCP is a very common communication protocol in industrial applications and the ioPAC RTU controller has built-in Modbus TCP master and slave functions. For more detailed information, refer to the **C/C++ Sample Code Programming Guide for ioPAC RTU Controllers**.

## DNS

The ioPAC RTU controllers can be set as a DNS client but not a DNS server. To set up the ioPAC as a DNS client, edit three configuration files: **/etc/hosts**, **/etc/resolv.conf**, and **/etc/nsswitch.conf**.

### **/etc/hosts**

This is the first file that the Linux system reads to resolve the host name and IP address.

### **/etc/resolv.conf**

This is the most important file to edit when using DNS for the other programs. For example, before using **#ntpdate time.nist.gov** to update the system time, add the DNS server address to the file. Ask your network administrator which DNS server address you should use. The DNS server's IP address is specified by the **nameserver** command. For example, add the following line to **/etc/resolv.conf** if the DNS server's IP address is 168.95.1.1:

**nameserver 168.95.1.1**

```
root@Moxa:/etc# cat resolv.conf
#
# resolv.conf This file is the resolver configuration file
# See resolver(5).
#
#nameserver 192.168.1.16
nameserver 168.95.1.1
nameserver 140.115.1.31
nameserver 140.115.236.10
root@Moxa:/etc#
```

### **/etc/nsswitch.conf**

This file defines the sequence to resolve the IP address by using **/etc/hosts** file or **/etc/resolv.conf**.

## Telnet/FTP

In addition to supporting Telnet client-server and FTP client-server architectures, the ioPAC RTU controllers also support SSH and SFTP client-server architectures. To enable or disable the Telnet/FTP server, first edit the file **/etc/inetd.conf**.

### **Enabling the Telnet/FTP server**

The following example shows the default content of the **/etc/inetd.conf** file. The Telnet/FTP server is enabled by default:

```
discard dgram udp wait root /bin/discard
discard stream tcp nowait root /bin/discard
telnet stream tcp nowait root /bin/telnetd
ftp stream tcp nowait root /bin/ftpd -l
```

### **Disabling the Telnet/FTP server**

Disable the daemon by typing **#** in front of the first character of the row to comment out the line.

## iptables

The **iptables** command is an administrative tool for setting up, maintaining, and inspecting the Linux kernel's IP packet filter rule tables. Several different tables are defined, with each table containing built-in chains and user-defined chains.

Each chain is a list of rules that apply to a certain type of packet. Each rule specifies what to do with a matching packet. A rule (such as a jump to a user-defined chain in the same table) is called a "target."

The ioPAC RTU controllers support 3 types of **iptables** tables: **Filter tables**, **NAT tables**, and **Mangle tables**:

**A. Filter tables**—includes three chains:

- INPUT chain
- OUTPUT chain
- FORWARD chain

**B. NAT tables**—includes three chains:

- PREROUTING chain—transfers the destination IP address (DNAT)
- POSTROUTING chain—works after the routing process and before the Ethernet device process to transfer the source IP address (SNAT)
- OUTPUT chain—produces local packets

*sub-tables*


- Source NAT (SNAT)—changes the first source packet IP address
- Destination NAT (DNAT)—changes the first destination packet IP address
- MASQUERADE—a special form for SNAT. If one host can connect to the Internet, then other computers that connect to this host can connect to the Internet when the computer does not have an actual IP address.
- REDIRECT—a special form of DNAT that re-sends packets to a local host independent of the destination IP address.

**C. Mangle tables**—includes two chains

- PREROUTING chain—pre-processes packets before the routing process.
- OUTPUT chain—processes packets after the routing process.

It has three extensions—TTL, MARK, TOS.

The following figure shows the **iptables** hierarchy.

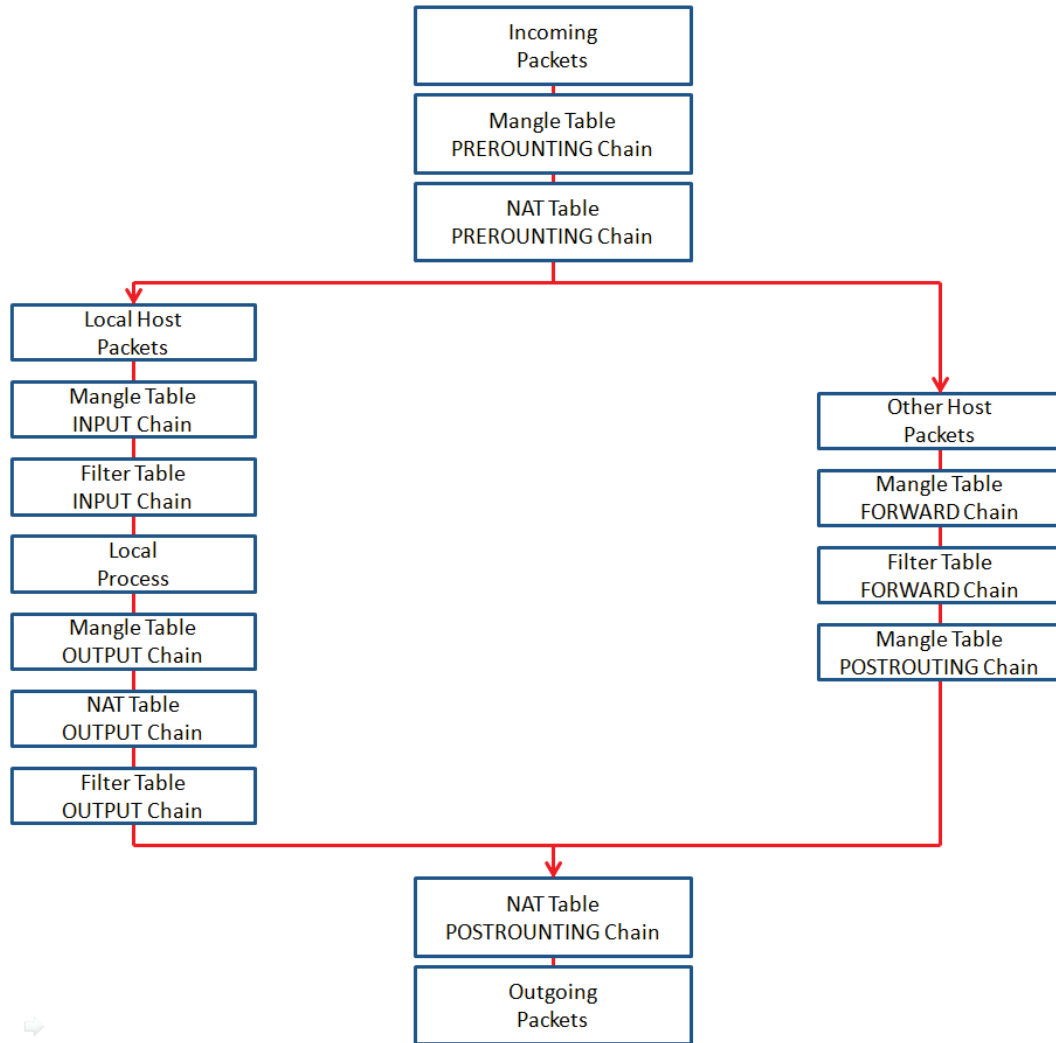

The ioPAC RTU controllers support the following sub-modules. Be sure to use the module that matches your application.

nf_conntrack	ipt_MASQUERADE	xt_length
nf_conntrack_ftp	ipt_REDIRECT	xt_limit
nf_conntrack_irc	ipt_REJECT	xt_mark
nf_nat_ftp	xt_TCPMSS	xt_multiport
nf_nat_irc	xt_mac	xt_owner
nf_nat_snmp_basic	ipt_ULOG	xt_state
nf_queue	ipt_ah	xt_tcpmss
ipt_LOG	xt_esp	

**NOTE** The ioPAC RTU controllers DO NOT support IPv6 or **ipchains**.

The basic syntax to enable and load an **iptables** module is as follows:

```

#lsmod
#modprobe ip_tables
#modprobe iptable_filter
    
```

Use **lsmod** to check if the **ip\_tables** module has already been loaded onto the ioPAC RTU controller unit. Use **modprobe** to insert and enable the module.

Use the following command to load the modules (**iptables\_filter**, **iptables\_mangle**, **iptables\_nat**):

```
#modprobe iptable_filter
```

**NOTE** **iptables** plays the role of packet filter or NAT. Take care when setting up the **iptables** rules. If the rules are not correct, remote hosts that connect via a LAN or PPP may be denied access. We recommend using the serial console to set up the **iptables**.

Click on the following links for more information about **iptables**:

<http://www.linuxguruz.com/iptables/>

<http://www.netfilter.org/documentation/HOWTO//packet-filtering-HOWTO.html>

To illustrate the **iptables** syntax, we have divided our discussion of the various rules into three categories: **observe and erase chain rules**, **define policy rules**, and **append or delete rules**.

## Observe and Erase Chain Rules

### Usage:

```
# iptables [-t tables] [-L] [-n]
```

-t tables: Table to manipulate (default: 'filter'); example: nat or filter.

-L [chain]: Lists all rules in selected chains. If no chain is selected, all chains are listed.

-n: Numeric output of addresses and ports.

```
# iptables [-t tables] [-FXZ]
```

-F: Flush the selected chain (all the chains in the table if none is listed).

-X: Delete the specified user-defined chain.

-Z: Set the packet and byte counters in all chains to zero.

### Examples:

```
# iptables -L -n
```

In this example, since we do not use the -t parameter, the system uses the default 'filter' table. Three chains are included: INPUT, OUTPUT, and FORWARD. INPUT chains are accepted automatically, and all connections are accepted without being filtered.

```
#iptables -F
```

```
#iptables -X
```

```
#iptables -Z
```

## Define Policy for Chain Rules

### Usage:

```
# iptables [-t tables] [-P] [INPUT, OUTPUT, FORWARD, PREROUTING, OUTPUT, POSTROUTING]
[ACCEPT, DROP]
```

- P: Set the policy for the chain to the given target.
- INPUT: For packets coming into the ioPAC RTU.
- OUTPUT: For locally-generated packets.
- FORWARD: For packets routed out through the ioPAC RTU.
- PREROUTING: To alter packets as soon as they come in.
- POSTROUTING: To alter packets as they are about to be sent out.

### Examples:

```
#iptables -P INPUT DROP
#iptables -P OUTPUT ACCEPT
#iptables -P FORWARD ACCEPT
#iptables -t nat -P PREROUTING ACCEPT
#iptables -t nat -P OUTPUT ACCEPT
#iptables -t nat -P POSTROUTING ACCEPT
```

In this example, the policy accepts outgoing packets and denies incoming packets.

## Append or Delete Rules

### Usage:

```
# iptables [-t table] [-AI] [INPUT, OUTPUT, FORWARD] [-io interface] [-p tcp, udp, icmp, all] [-s
IP/network] [--sport ports] [-d IP/network] [--dport ports] -j [ACCEPT. DROP]
```

- A: Append one or more rules to the end of the selected chain.
- I: Insert one or more rules in the selected chain as the given rule number.
- i: Name of an interface via which a packet is going to be received.
- o: Name of an interface via which a packet is going to be sent.
- p: The protocol of the rule or of the packet to check.
- s: Source address (network name, host name, network IP address, or plain IP address).
- sport: Source port number.
- d: Destination address.
- dport: Destination port number.
- j: Jump target. Specifies the target of the rules; i.e., how to handle matched packets. For example, ACCEPT the packet, DROP the packet, or LOG the packet.

### Examples:

Example 1: Accept all packets from lo interface.

```
# iptables -A INPUT -i lo -j ACCEPT
```

Example 2: Accept TCP packets from 192.168.0.1.

```
# iptables -A INPUT -i eth0 -p tcp -s 192.168.0.1 -j ACCEPT
```

Example 3: Accept TCP packets from Class C network 192.168.1.0/24.

```
# iptables -A INPUT -i eth0 -p tcp -s 192.168.1.0/24 -j ACCEPT
```

Example 4: Drop TCP packets from 192.168.1.25.

```
# iptables -A INPUT -i eth0 -p tcp -s 192.168.1.25 -j DROP
```

Example 5: Drop TCP packets addressed for port 21.

```
# iptables -A INPUT -i eth0 -p tcp --dport 21 -j DROP
```

Example 6: Accept TCP packets from 192.168.0.24 to W341's port 137, 138, 139

```
# iptables -A INPUT -i eth0 -p tcp -s 192.168.0.24 --dport 137:139 -j ACCEPT
```

Example 7: Drop all packets from MAC address 01:02:03:04:05:06.

```
# iptables -A INPUT -i eth0 -p all -m mac --mac-source 01:02:03:04:05:06 -j DROP
```


**NOTE** In Example 7, remember to issue the command `#modprobe ipt_mac` first to load module `ipt_mac`.

## NAT (SNAT)

NAT (Network Address Translation) protocol translates IP addresses used on one network to different IP addresses used on another network. One network is designated the inside network and the other is the outside network. Typically, the ioPAC RTU controllers connect several devices on a network and maps local inside network addresses to one or more global outside IP addresses, and un-maps the global IP addresses on incoming packets back into local IP addresses.

**NOTE** Click on the following links for more information about iptables and NAT:  
<http://www.netfilter.org/documentation/HOWTO/NAT-HOWTO.html>

The IP address of LAN1 is changed to 192.168.127.254 (you will need to load the module `ipt_MASQUERADE`):

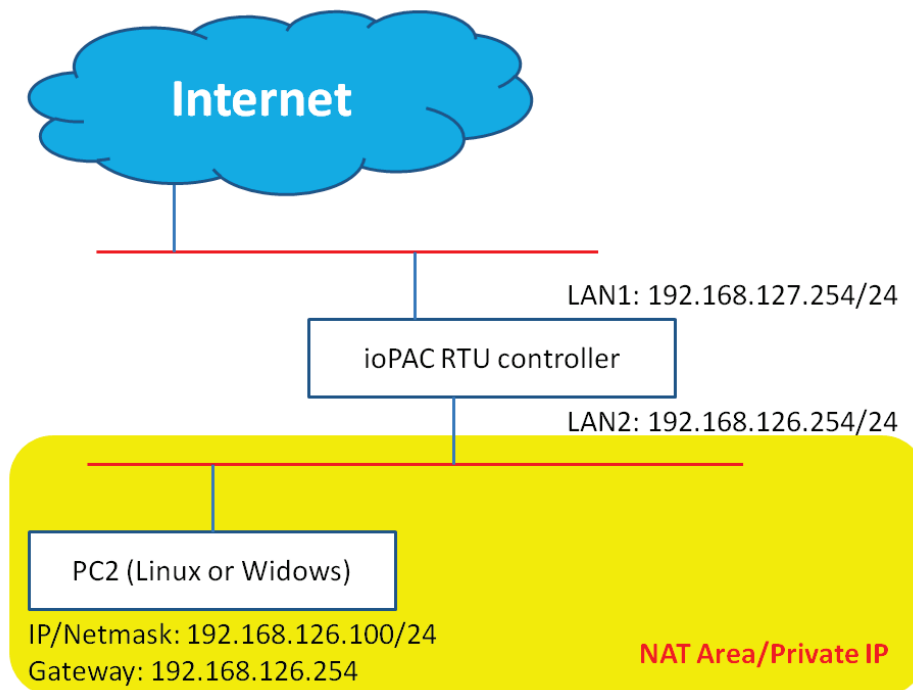

1. `#echo 1 > /proc/sys/net/ipv4/ip_forward`
2. `#modprobe ip_tables`
3. `#modprobe iptable_filter`
4. `#modprobe nf_conntrack`
5. `#modprobe iptable_nat`
6. `#modprobe ipt_MASQUERADE`
7. `#iptables -t nat -A POSTROUTING -o eth0 -j SNAT --to-source 192.168.127.254`
8. `#iptables -t nat -A POSTROUTING -o eth0 -s 192.168.126.0/24 -j MASQUERADE`



## Enabling NAT at Bootup

In most real world situations, use a simple shell script to enable NAT when the ioPAC RTU controller boots up. The following script is an example.

```
#!/bin/bash
# If you put this shell script in the /home/nat.sh
# Remember to chmod 744 /home/nat.sh
# Edit the rc.local file to make this shell startup automatically.
# vi /etc/rc.d/rc.local
# Add a line in the end of rc.local /home/nat.sh
EXIF='eth0' #This is an external interface for setting up a valid IP address.
EXNET='192.168.126.0/24' #This is an internal network address.
```

1. Insert modules.

```
# Here 2> /dev/null means the standard error messages will be dump to null device.
modprobe nf_tables 2> /dev/null
modprobe nf_conntrack 2> /dev/null
modprobe nf_conntrack_ftp 2> /dev/null
modprobe nf_conntrack_irc 2> /dev/null
modprobe iptable_nat 2> /dev/null
modprobe nf_nat_ftp 2> /dev/null
modprobe nf_nat_irc 2> /dev/null
```


2. Define variables, enable routing, and erase default rules.

```
PATH=/bin:/sbin:/usr/bin:/usr/sbin:/usr/local/bin:/usr/local/sbin
export PATH
echo "1" > /proc/sys/net/ipv4/ip_forward
/bin/iptables -F
/bin/iptables -X
/bin/iptables -Z
/bin/iptables -F -t nat
/bin/iptables -X -t nat
/bin/iptables -Z -t nat
/bin/iptables -P INPUT ACCEPT
/bin/iptables -P OUTPUT ACCEPT
/bin/iptables -P FORWARD ACCEPT
/bin/iptables -t nat -P PREROUTING ACCEPT
/bin/iptables -t nat -P POSTROUTING ACCEPT
/bin/iptables -t nat -P OUTPUT ACCEPT
```

3. Enable IP masquerade.

## Port Forwarding (DNAT)

Port forwarding allows remote computers (e.g., computers on the Internet) to connect to a specific computer or service within a private local-area network (LAN). The following is an FTP port forwarding example.

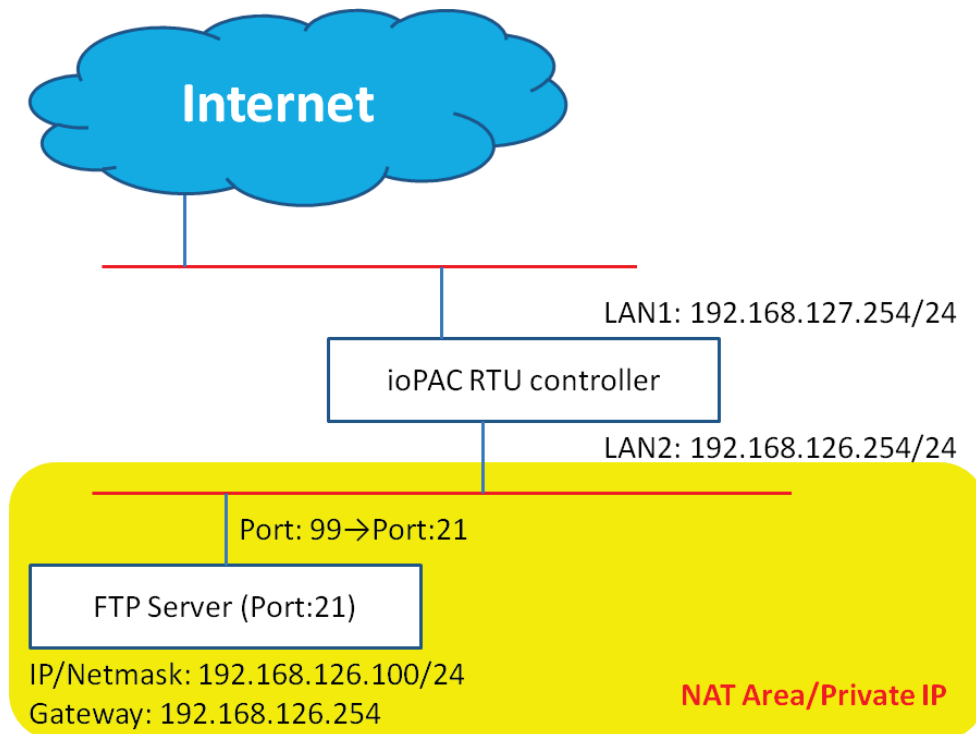

```
echo 1 >/proc/sys/net/ipv4/ip_forward
modprobe ip_tables
modprobe nf_conntrack
modprobe nf_conntrack_ftp
modprobe nf_conntrack_irc
modprobe iptable_nat
modprobe nf_nat_ftp
modprobe nf_nat_irc
iptables -t nat -A PREROUTING -p tcp --dport 99 -i eth0 -j DNAT --to-destination 192.168.126.100:
```

## PPP Dial-up Service

PPP (Point to Point Protocol) is used to run IP (Internet Protocol) and other network protocols over a serial link. PPP can be used for direct serial connections (using a null-modem cable) over a Telnet link, and links established using a modem over a telephone line.

Modem/PPP access is almost identical to connecting directly to a network through the ioPAC RTU controller Ethernet port. Since PPP is a peer-to-peer system, the ioPAC RTU controller can also use PPP to link two networks (or a local network to the Internet) to create a Wide Area Network (WAN).

**NOTE** More information about PPP is available at:  
<http://tldp.org/HOWTO/PPP-HOWTO/index.html>  
<http://axion.physics.ubc.ca/ppp-linux.html>

The **pppd** daemon is used to connect to a PPP server from a Linux system. For more detailed information about **pppd**, use **pppd --help**.

## Example 1: Connecting to a PPP server over a simple dial-up connection

The following command is used to connect to a PPP server by modem. Use this command for old ppp servers that prompt for a login name (replace username with the correct name) and password (replace password with the correct password). Note that debug and default route 192.1.1.17 are optional.

```
#pppd connect `chat -v "" ATDT5551212 CONNECT "" ogin: username word: password`  
/dev/ttyM0 115200 debug crtscts modem defaultroute
```

If the PPP server does not prompt for the username and password, the command should be entered as follows. Replace username with the correct username and replace password with the correct password.

```
#pppd connect `chat -v "" ATDT5551212 CONNECT "" user username password password`  
/dev/ttyM0 115200 crtscts modem
```

The pppd options are described below:

### **connect `chat etc...`**

This option gives the command to contact the PPP server. The 'chat' program is used to dial a remote computer. The entire command is enclosed in single quotes because pppd expects a one-word argument for the 'connect' option. The options for 'chat' are given below:

#### **-v**

verbose mode; log what we do to syslog

""

Double quotes—don't wait for a prompt, but instead do ... (note that you must include a space after the second quotation mark)

#### **ATDT5551212**

Dial the modem, and then ...

#### **CONNECT**

Wait for an answer.

""

Send a return (null text followed by the usual return)

#### **login: username word: password**

Log in with the username and password.

#### **/dev/**

Specify the callout serial port.

#### **115200**

The baudrate.

#### **debug**

Log status in syslog.

#### **crtscts**

Use hardware flow control between computer and modem (at 115200 this is a must).

#### **modem**

Indicates that this is a modem device; pppd will hang up the phone before and after making the call.

#### **defaultroute**

Once the PPP link is established, make it the default route; if you have a PPP link to the Internet, this is probably what you want.

### 192.1.1.17

This is a degenerate case of a general option of the form **x.x.x.x:y.y.y.y**. Here **x.x.x.x** is the local IP address and **y.y.y.y** is the IP address of the remote end of the PPP connection. If this option is not specified, or if just one side is specified, then **x.x.x.x** defaults to the IP address associated with the local machine's hostname (located in **/etc/hosts**), and **y.y.y.y** is determined by the remote machine.

## Example 2: Connecting to a PPP Server over a Hard-Wired Link

If a username and password are not required, use the following command (note that **noipdefault** is optional):

```
#pppd connect `chat -v " " " " ` noipdefault /dev/ttyM0 19200 crtscts "
```

If a username and password is required, use the following command (note that **noipdefault** is optional, and **root** is both the username and password):

```
#pppd connect `chat -v " " " " ` user root password root noipdefault
/dev/ttyM0 19200 crtscts
```

## How to Check the Connection

Once you've set up a PPP connection, there are some steps you can take to test the connection. First, type:

```
/sbin/ifconfig
```

(The folder **ifconfig** may be located elsewhere, depending on your distribution.) You should be able to see all the network interfaces that are UP. **ppp0** should be one of them, and you should recognize the first IP address as your own, and the **P-t-P address** (or point-to-point address) the address of your server. Here's what it looks like on one machine:

```
lo                Link encap Local Loopback
                  inet addr 127.0.0.1  Bcast 127.255.255.255      Mask 255.0.0.0
                  UP LOOPBACK RUNNING      MTU 2000      Metric 1
                  RX packets 0 errors 0 dropped 0 overrun 0
ppp0              Link encap Point-to-Point Protocol
                  inet addr 192.76.32.3          P-t-P 129.67.1.165  Mask 255.255.255.0
                  UP POINTOPOINT RUNNING  MTU 1500      Metric 1
                  RX packets 33 errors 0 dropped 0 overrun 0
                  TX packets 42 errors 0 dropped 0 overrun 0
```

Now, type:

```
ping z.z.z.z
```

where **z.z.z.z** is the address of your name server. This should work. Here's what the response could look like:

```
waddington:~$p ping 129.67.1.165
PING 129.67.1.165 (129.67.1.165): 56 data bytes
64 bytes from 129.67.1.165: icmp_seq=0 ttl=225 time=268 ms
64 bytes from 129.67.1.165: icmp_seq=1 ttl=225 time=247 ms
64 bytes from 129.67.1.165: icmp_seq=2 ttl=225 time=266 ms
^C
--- 129.67.1.165 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max = 247/260/268 ms
waddington:~$
```

Try typing:

**netstat -nr**

This should show three routes, something like this:

**Kernel routing table**

Destination	iface	Gateway	Genmask	Flags	Metric	Ref	Use
129.67.1.165	ppp0	0.0.0.0	255.255.255.255	UH	0	0	6
127.0.0.0		0.0.0.0	255.0.0.0	U	0	0	0 lo
0.0.0.0	ppp0	129.67.1.165	0.0.0.0	UG	0	0	6298

If your output looks similar but doesn't have the destination 0.0.0.0 line (which refers to the default route used for connections), you may have run **pppd** without the **defaultroute** option. At this point you can try using Telnet, FTP, or finger, bearing in mind that you'll have to use numeric IP addresses unless you've set up **/etc/resolv.conf** correctly.

## Setting up a Machine for Incoming PPP Connections

This first example applies to using a modem, and requiring authorization with a username and password.

```
pppd/dev/ttyM0 115200 crtscts modem 192.168.16.1:192.168.16.2 login auth
```

You should also add the following line to the file **/etc/ppp/pap-secrets**:

```
* * "" *
```

The first asterisk (\*) lets everyone log in. The second asterisk (\*) lets every host connect. The pair of double quotation marks (") is to use the **/etc/passwd** file to check the password. The last asterisk (\*) is to let any IP address connect.

The following example does not check the username and password:

```
pppd/dev/ttyM0 115200 crtscts modem 192.168.16.1:192.168.16.2
```

## PPPoE

1. Connect the ioPAC RTU controller LAN port to an ADSL modem with a cross-over cable, hub, or switch.
2. Log in to the ioPAC RTU controller as the root user.
3. Edit the file **/etc/ppp/chap-secrets** and add the following:

```
"username@hinet.net"*"password"*
```

```
# Secrets for authentication using CHAP
# client          server secret          IP addresses

# PPPOE example, if you want to use it, you need to unmark it and modify it
"username@hinet.net" *          "password" *

# following is INBOUND for everyone
* * "" *
```

**"username@hinet.net"** is the username obtained from the ISP to log in to the ISP account. **"password"** is the corresponding password for the account.

4. Edit the file **/etc/ppp/pap-secrets** and add the following:

```
"username@hinet.net"*"password"*
```

```
# INBOUND connections

# Every regular user can use PPP and has to use passwords from /etc/passwd
* * "" *

# PPPOE user example, if you want to use it, you need to unmark it and modify it
"username@hinet.net" *          "password" *
```

```
# UserIDs that cannot use PPP at all. Check your /etc/passwd and add any# other accounts that should
not be able to use pppd!
guest hostname "*" -
master hostname "*" -
root hostname "*" -
support hostname "*" -
stats hostname "*" -
```

"**username@hinet.net**" is the username obtained from the ISP to log in to the ISP account. "**password**" is the corresponding password for the account.

5. Edit the file **/etc/ppp/options** and add the following line:

**plugin pppoe**

```
# This wait period only applies if the connect or pty option is used.
#connect-delay <n>

# Load the pppoe plugin
plugin /lib/pppoe.so

# ---<End of File>---
```

6. Add one of two files: **/etc/ppp/options.eth0** or **/etc/ppp/options.eth1**. The choice depends on which LAN is connected to the ADSL modem. If you use LAN1 to connect to the ADSL modem, then add **/etc/ppp/options.eth0**. If you use LAN2 to connect to the ADSL modem, then add **/etc/ppp/options.eth1**. The file context is shown below:

```
name username@hinet.net
mtu 1492
mru 1492
defaultroute
noipdefault
~
```

Type your username (the one you set in the **/etc/ppp/pap-secrets** and **/etc/ppp/chap-secrets** files) after the "name" option. You may add other options as desired.

7. Set up DNS

If you are using DNS servers supplied by your ISP, edit the file **/etc/resolv.conf** by adding the following lines of code:

```
nameserver ip_addr_of_first_dns_server
nameserver ip_addr_of_second_dns_server
```

For example:

```
nameserver 168.95.1.1
nameserver 139.175.10.20
```

8. Use the following command to create a PPPoE connection:

**pppd eth0**

The eth0 is what is connected to the ADSL modem LAN port. The example above uses LAN1. To use LAN2, type:

**pppd eth1**

9. Type **ifconfig ppp0** to check if the connection is OK or has failed. If the connection is OK, you will see information about the ppp0 setting for the IP address. Use ping to test the IP.
10. If you want to disconnect it, use the kill command to kill the **pppd** process.

## NFS (Network File System) Client

The Network File System (NFS) is used to mount a disk partition on a remote machine, as if it were on a local hard drive, allowing fast, seamless sharing of files across a network. NFS allows users to develop applications for the ioPAC RTU controllers, without worrying about the amount of disk space that will be available. The ioPAC RTU controller supports NFS protocol for clients.

**NOTE** More information about NFS is available at:  
<http://www.tldp.org/HOWTO/NFS-HOWTO/index.html>  
<http://nfs.sourceforge.net/nfs-howto/client.html>  
<http://nfs.sourceforge.net/nfs-howto/server.html>

### Setting up the ioPAC RTU Controller as an NFS Client

The following procedure is used to mount a remote NFS Server.

1. To know the NFS Server's shared directory.
2. Establish a mount point on the NFS Client site.
3. Mount the remote directory to a local directory.

```
#mkdir -p /home/nfs/public  
#mount -t nfs NFS_Server(IP):/directory /mount/point
```

**Example:**

```
#mount -t nfs -o nolock 192.168.13.1:/home/public /home/nfs/public
```

## Sending Mail

**msmtp** is a minimal SMTP client that takes an email message body and passes it on to an SMTP server. It is suitable for applications that use email to send alert messages or important logs to a specific user.

**NOTE** More information about **smtpclient** is available at:  
<https://wiki.archlinux.org/index.php/Msmtp>

To send an email message, use the 'smtpclient' utility, which uses SMTP protocol. Type **msmtp --help** to see the help message.

**Example:**

```
msmtp --host=hostname --read-envelope-from address_receiver@moxa.com
```

## OpenVPN

OpenVPN provides two types of tunnels for users to implement VPNS: **Routed IP Tunnels** and **Bridged Ethernet Tunnels**. To begin with, check to make sure that the system has a virtual device named **/dev/net/tun**. If not, issue the following command:


```
# mknod /dev/net/tun c 10 200
```

An Ethernet bridge is used to connect different Ethernet networks together. The Ethernets are bundled into one bigger, "logical" Ethernet. Each Ethernet corresponds to one physical interface (or port) that is connected to the bridge.

On each OpenVPN machine, you should generate a working directory, such as **/etc/openvpn**, where script files and key files reside. Once established, all operations will be performed in that directory.

## Setup 1: Ethernet Bridging for Private Networks on Different Subnets

1. Set up four machines, as shown in the following diagram.

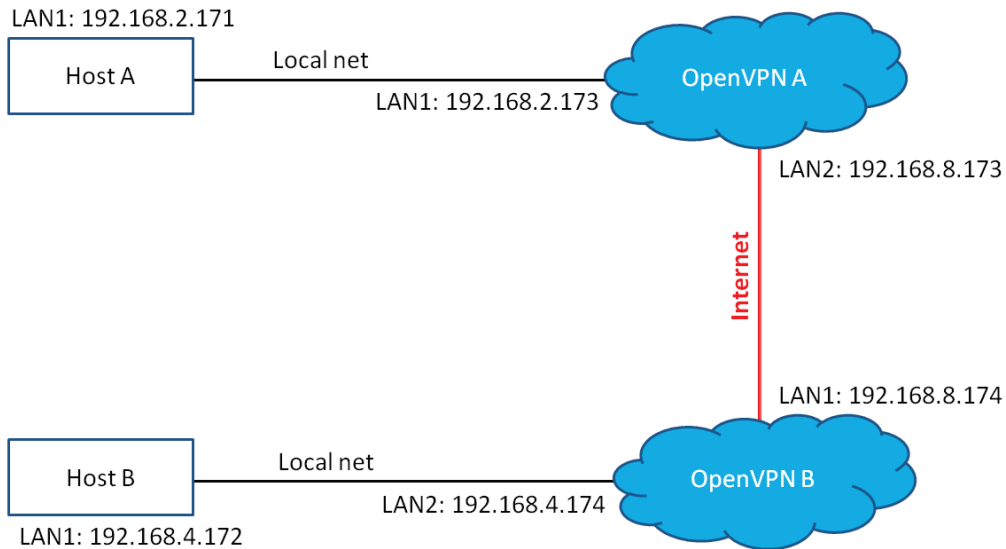

Host A (B) represents one of the machines that belongs to OpenVPN A (B). The two remote subnets are configured for a different range of IP addresses. When this setup is moved to a public network, the external interfaces of the OpenVPN machines should be configured for static IPs, or connect to another device (such as a firewall or DSL box) first.

### # **openvpn --genkey --secret secrouter.key**

Copy the file that is generated to the OpenVPN machine.

2. Create link symbols to enable this script at boot time:

```
# ln -s /etc/openvpn/openvpn-bridge /etc/rc.d/rc3.d/S32vpn-br # for example
# ln -s /etc/openvpn/openvpn-bridge /etc/rc.d/rc6.d/K32vpn-br # for example
```

3. Create a configuration file named **A-tap0-br.conf** and an executable script file named **A-tap0-br.sh** on OpenVPN A.

```
# point to the peer
remote 192.168.8.174
dev tap0
secret /etc/openvpn/secrouter.key
cipher DES-EDE3-CBC
auth MD5
tun-mtu 1500
tun-mtu-extra 64
ping 40
up /etc/openvpn/A-tap0-br.sh
#-----Start-----
#!/bin/sh
# value after "-net" is the subnet behind the remote peer
route add -net 192.168.4.0 netmask 255.255.255.0 dev br0
#----- end -----
```

Create a configuration file named **B-tap0-br.conf** and an executable script file named **B-tap0-br.sh** on OpenVPN B.

```
# point to the peer
remote 192.168.8.173
dev tap0
secret /etc/openvpn/secrouter.key
```



```

cipher DES-EDE3-CBC
auth MD5 tun-mtu 1500
tun-mtu-extra 64
ping 40
up /etc/openvpn/B-tap0-br.sh
#-----Start-----
#!/bin/sh
# value after "-net" is the subnet behind the remote peer
route add -net 192.168.2.0 netmask 255.255.255.0 dev br0
#----- end -----

```

**NOTE:** Select cipher and authentication algorithms by specifying "cipher" and "auth". To see which algorithms are available, type:

```

# openvpn --show-ciphers
# openvpn --show-auths

```

4. Start both of OpenVPN peers,

```

# openvpn --config A-tap0-br.conf&
# openvpn --config B-tap0-br.conf&

```

If you see the line "Peer Connection Initiated with 192.168.8.173:5000" on each machine, the connection between OpenVPN machines has been established successfully on UDP port 5000.

5. On each OpenVPN machine, check the routing table by typing the command:

```
# route
```

Destination	Gateway	Genmsk	Flags	Metric	Ref	Use	Iface
192.168.4.0	*	255.255.255.0	U	0	0	0	br0
192.168.2.0	*	255.255.255.0	U	0	0	0	br0
192.168.8.0	*	255.255.255.0	U	0	0	0	eth0

Interface **eth1** is connected to the bridging interface **br0**, to which device **tap0** also connects, whereas the virtual device **tun** sits on top of **tap0**. This ensures that all traffic from internal networks connected to interface **eth1** that come to this bridge write to the TAP/TUN device that the OpenVPN program monitors. Once the OpenVPN program detects traffic on the virtual device, it sends the traffic to its peer.

6. To create an indirect connection to Host B from Host A, you need to add the following routing item:

```
route add -net 192.168.4.0 netmask 255.255.255.0 dev eth0
```

To create an indirect connection to Host A from Host B, you need to add the following routing item:

```
route add -net 192.168.2.0 netmask 255.255.255.0 dev eth0
```

Now ping Host B from Host A by typing:

```
ping 192.168.4.174
```


A successful ping indicates that you have created a VPN system that only allows authorized users from one internal network to access users at the remote site. For this system, all data is transmitted by UDP packets on port 5000 between OpenVPN peers.

7. To shut down OpenVPN programs, type the command:

```
# killall -TERM openvpn
```

## Setup 2: Ethernet Bridging for Private Networks on the Same Subnet


1. Set up four machines as shown in the following diagram:

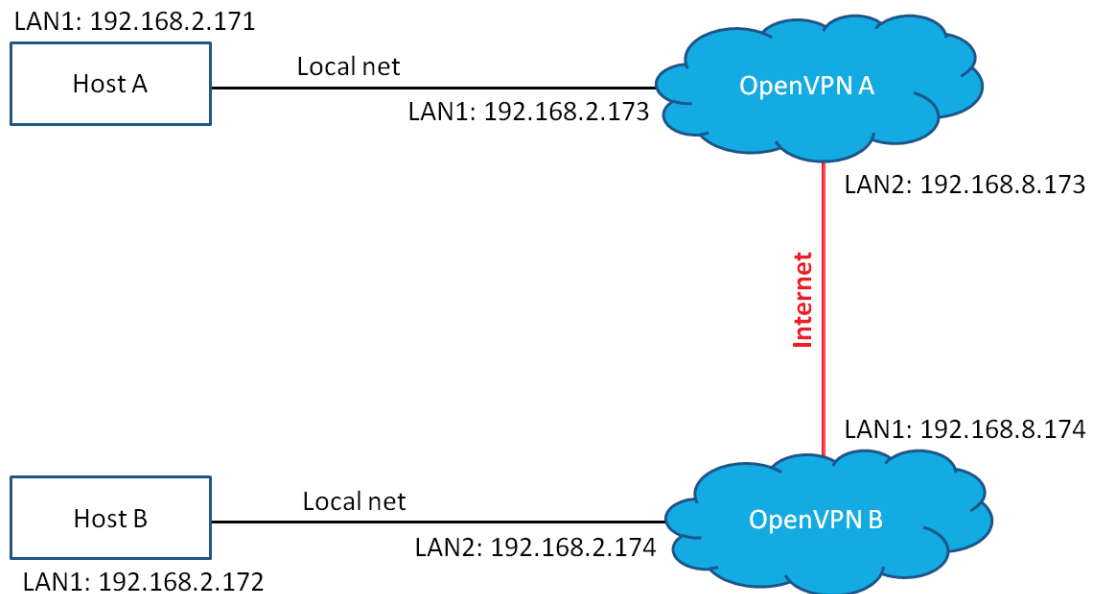

- The configuration procedure is almost the same as for the previous example. The only difference is that you will need to comment on the parameter "up" in "/etc/openvpn/A-tap0-br.conf" and "/etc/openvpn/B-tap0-br.conf".

### Setup 3: Routed IP

- Set up four machines as shown in the following diagram:

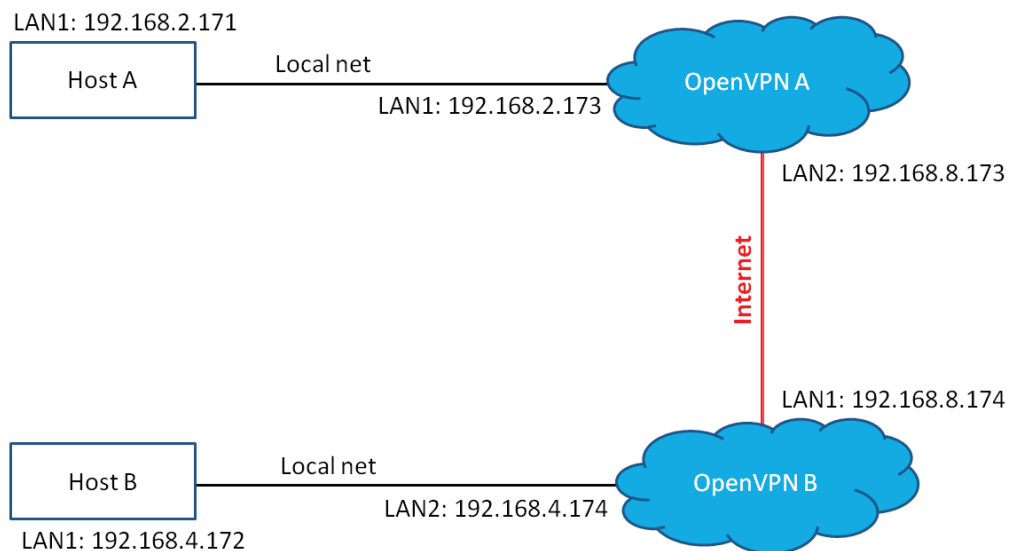

- Create a configuration file named "A-tun.conf" and an executable script file named "A-tun.sh".

```
# point to the peer
remote 192.168.8.174
dev tun
secret /etc/openvpn/secrouter.key
cipher DES-EDE3-CBC
auth MD5
tun-mtu 1500
tun-mtu-extra 64
ping 40
ifconfig 192.168.2.173 192.168.4.174
up /etc/openvpn/A-tun.sh
```

```
#-----Start-----
#!/bin/sh
# value after "-net" is the subnet behind the remote peer
route add -net 192.168.4.0 netmask 255.255.255.0 gw $5
#----- end -----
```

Create a configuration file named B-tun.conf and an executable script file named B-tun.sh on OpenVPN B:

```
remote 192.168.8.173
dev tun
secret /etc/openvpn/secrouter.key
cipher DES-EDE3-CBC
auth MD5
tun-mtu 1500
tun-mtu-extra 64
ping 40
ifconfig 192.168.4.174 192.168.2.173
up /etc/openvpn/B-tun.sh
```

```
#-----Start-----
#!/bin/sh
# value after "-net" is the subnet behind the remote peer
route add -net 192.168.2.0 netmask 255.255.255.0 gw $5
#----- end -----
```

Note that the parameter "ifconfig" defines the first argument as the local internal interface and the second argument as the internal interface at the remote peer.

Note that **\$5** is the argument that the OpenVPN program passes to the script file. Its value is the second argument of **ifconfig** in the configuration file.

3. Check the routing table after you run the OpenVPN programs, by typing the command:

```
# route
```

Destination	Gateway	Genmsk	Flags	Metric	Ref	Use	Iface
192.168.4.174	*	255.255.255.255	UH	0	0	0	tun0
192.168.4.0	192.168.4.174	255.255.255.0	UG	0	0	0	tun0
192.168.2.0	*	255.255.255.0	U	0	0	0	eth1
192.168.8.0	*	255.255.255.0	U	0	0	0	eth0

## NTP Server/Client

Refer to the **System Time Setting** section in Chapter 3 for more information.

## Port Trunking

To enable the port trunking function, use the debug port as described in the following steps.

1. Enable the port trunking function (IP\_Bonding mode 1)

```
/etc/init.d/networking stop
```

```
ipset bond0 -aup -i192.168.19.151 -n255.255.255.0 -g192.168.19.254
```

```
modprobe bonding mode=1 miimon=100 use_carrier=0
```

```
/etc/init.d/networking start
```

2. After configuration, the virtual IP address will be set to 192.168.19.151
3. Disable the port trunking function

```
/etc/init.d/networking stop
```

```
ipset bond0 -adown
```

```
/etc/init.d/networking start
```

4. Use the **ifconfig** command to check the Ethernet configuration.

## Serial Configuration

### Modbus RTU Master

Modbus RTU is a very common communication protocol in industrial applications and the ioPAC RTU controller has a built-in Modbus RTU master function. For more detailed information, see the **C/C++ Sample Code Programming Guide for ioPAC RTU Controllers**.

## RTU Data Acquisition

---

This chapter explains how to use the ioPAC RTU controller for data acquisition.

The following topics are covered in this chapter:

- ❑ **I/O Data Access**
- ❑ **Battery Backup SRAM**
- ❑ **Millisecond Timestamp**
- ❑ **Active OPC Server**

## I/O Data Access

ioPAC RTU controllers support many kinds of I/O modules that collect physical data from sensors. For ioPAC 8500 series, users can use modularized 85M series I/O modules.

Moxa provides C/C++ programming tools for users to develop their own project for data acquisition. C/C++ library and APIs can be found under **C/C++ Sample Code Programming Guide for ioPAC RTU Controllers → Files → io, io\_event, and misc.**

One important function of the current analog input module is the Burn Out function. Users can use the **MX\_RTU\_Module\_AI\_Burnout\_Value\_Set** API to configure the Burn Out mode. If a module is burned out or a wire is disconnected, the LED will turn RED.

## Battery Backup SRAM

ioPAC RTU controllers support battery backup SRAM which is an important part of applications that require any kind of data backup in the event of a power failure. The size is 128 KB and users can use the APIs **MX\_RTU\_SRAM\_Read** and **MX\_RTU\_SRAM\_Write** to access the SRAM. For more detailed information and examples, please refer to **C/C++ Sample Code Programming Guide for ioPAC RTU Controllers → Files → misc.**

## Millisecond Timestamp

A timestamp is a sequence of characters or encoded information identifying when a certain event occurred, usually expressing the date and time of day and sometimes accurate to a small fraction of a second. The ioPAC 85M-1602-T and 85M-3801/11-T support modules have a dual CPU architecture, which means each I/O module has its own CPU that can easily record events in milliseconds. Using this function enables the ioPAC to collect data more accurately by providing millisecond timestamps for event and historical data analysis. Thanks to the millisecond timestamp function, operators can distinguish the sequence of data and know how to handle this event accordingly.

Users can use the APIs **MX\_RTU\_Module\_DI\_Value\_Get**, **MX\_RTU\_Module\_AI\_Raw\_Value\_Get**, and **MX\_RTU\_Module\_AI\_Eng\_Value\_Get** to retrieve the timestamp information from I/O modules. For more detailed information and examples, please refer to **C/C++ Sample Code Programming Guide for ioPAC RTU Controllers → Files.**

## Active OPC Server

Active OPC (AOPC) Server is a software package provided by Moxa that operates as an OPC driver for an HMI or SCADA system. It offers seamless connection from Moxa's ioLogik series products to SCADA systems. Active OPC Server meets the latest standard of OPC DA 3.0, which allows connections to various kinds of devices and host OPC machines.

Moxa has pioneered the concept of "active type" OPC software in the automation industry. The patented Active OPC Server offers non-polling architecture alongside the standard OPC protocol, giving users the alternative of active, push-based communication from Moxa's RTUs and remote I/O devices. This adaptation of "push" technology means that I/O status will be updated at the Active OPC Server only when there is an I/O status change, a pre-configured interval is reached, or when a request is issued by a user. This application of push technology cuts metadata overhead, resulting in faster I/O response times and more accurate data collection than traditional pull-based architectures. With Moxa's "active technology" advantage, users can now instantly receive alarms and real-time updates allowing for timely risk response.

Use the **AOPC APIs** to configure and access the AOPC tag information. For more detailed information and examples, please refer to **C/C++ Sample Code Programming Guide for ioPAC RTU Controllers → Files → aopc.**

This chapter describes how to install a toolchain onto the host computer that you use to develop your applications. Cross-platform development and debugging are also discussed.

The following topics are covered in this chapter:

▣ **Programming Guide**

- Memory Usage

▣ **Using C/C++**

- Linux Toolchain
- On-Line Debugging with GDB
- Library and APIs

# Programming Guide

## Memory Usage

Partition sizes are hard coded into the kernel binary. The total flash memory on the ioPAC RTU controller is 32 MB.

FLASH system space: 20 MB (read only)

FLASH user space: 12 MB (read/write, /home, /etc, /temp support)

Users can use **df** and **free** commands to check memory information.

```

root@Moxa:~# df
Filesystem      1K-blocks      Used Available Use% Mounted on
/dev/root        16384          8452       7932   52% /
/dev/ram0         499            17         457    4% /var
/dev/ram7        2011           15        1894    1% /dev
/dev/mtdblock3  12288          740       11548   6% /tmp
/dev/mtdblock3  12288          740       11548   6% /home
/dev/mtdblock3  12288          740       11548   6% /etc
tmpfs           30556           0        30556   0% /dev/shm
root@Moxa:~# free
              total        used         free       shared    buffers
Mem:           61116        13476        47640            0          40
Swap:            0             0             0
Total:         61116        13476        47640
root@Moxa:~#

```

If the user file system is incorrect, the kernel will change the root file system to the kernel and use the default Moxa file system. To finish the boot process, run the init program.

- NOTE**
1. The user file system is a complete file system. Users can create and delete directories and files (including source code and executable files) as needed.
  2. Users can create the user file system on the host PC or the target platform and copy it to the ioPAC RTU controller.
  3. Continuously writing data to flash is not recommended, since doing so will decrease the flash's life.

## Using C/C++

### Linux Toolchain

The Linux toolchain contains a suite of cross compilers and other tools, as well as the libraries and header files that are necessary to compile your applications. These toolchain components must be installed on your host computer (PC) running Linux. We have confirmed that the following Linux distributions can be used to install the toolchain.

#### ioPAC 8500 & 5500 Series

Debian 6.0.1

Ubuntu 11.04

Fedora Core 15

### Steps for Installing the Linux Toolchain

Refer to the **Install the Toolchain onto the PC** section in Chapter 2.



## Compilation for Applications

To compile a simple C application, use the cross compiler instead of the regular compiler:

```
#arm-linux-gcc -o example -Wall -g -O2 example.c
```

```
#arm-linux-strip -s example
```

```
#arm-linux-gcc -ggdb -o example-debug example.c
```

Most of the cross compiler tools are the same as their native compiler counterparts, but have an additional prefix that specifies the target system. In the case of x86 environments, the prefix is **i386-linux-**. In the case of the ioPAC RTU controller, the prefix is **arm-linux-**.

For example, the native C compiler is **gcc** and the cross C compiler for ARM in the ioPAC is **arm-linux-gcc**.

Moxa provides cross compiler tools for the following native compilers. Simply add the **arm-linux-** prefix.

ar	Manages archives (static libraries)
as	Assembler
c++, g++	C++ compiler
cpp	C preprocessor
gcc	C compiler
gdb	Debugger
ld	Linker
nm	Lists symbols from object files
objcopy	Copies and translates object files
objdump	Displays information about object files
ranlib	Generates indexes to archives (static libraries)
readelf	Displays information about ELF files
size	Lists object file section sizes
strings	Prints strings of printable characters from files (usually object files)
strip	Removes symbols and sections from object files (usually debugging information)

## On-Line Debugging with GDB

The toolchain also provides an online debugging mechanism to help you develop your program. Before performing a debugging session, add the option **-ggdb** to compile the program. A debugging session runs on a client-server architecture on which the server **gdbserver** is installed on the ioPAC RTU and the client **ddd** is installed in the host computer. We'll assume that you have uploaded a program named **hello\_world-debug** to the ioPAC RTU and start to debug the program.

1. Log on to the ioPAC and run the debugging server program.

```
#gdbserver 192.168.127.254:2000 hello_world-debug
```

```
Process hello_world-debug created; pid=38
```

The debugging server listens for connections at network port 2000 from the network interface 192.168.127.254. The name of the program to be debugged follows these parameters. For a program requiring arguments, add the arguments behind the program name.

2. In the host computer, change the directory to where the program source resides.

```
cd /my_work_directory/myfilesystem/testprograms
```

3. Execute the client program.

```
#ddd --debugger arm-linux-gdb hello_world-debug &
```

4. Enter the following command at the GDB, DDD command prompt.

```
Target remote 192.168.127.5:2000
```

The command produces a line of output on the target console, similar to the following.

```
Remote debugging using 192.168.127.5:2000
```

192.168.127.5 is the host PC's IP address, and 2000 is the port number. You can now begin debugging in the host environment using the interface provided by DDD.

5. Set an execution breakpoint by double-clicking, or by entering **b main** on the command line.
6. Click the **cont** button.

## Library and APIs

For more detailed information about the library and APIs, please refer to the **C/C++ Sample Code Programming Guide for ioPAC RTU Controllers**.

# A

## System Commands

---

### File Manager

Command	Description
chgrp	change file group
chmod	change file owner & group & user
chown	change file owner
cp	copy file
df	list now file system space
ln	make symbolic link file
ls	list file
mkdir	make new directory
mount	mount and check file system
mv	move file
pwd	display now file directly
rm	delete file
rmdir	delete directory
sync	sync file system, let system file buffer be saved to hardware

### Editor

Command	Description
cat	dump file context
cut	get string on file
echo	echo string
find	find file where are there
grep	search string on file
more	dump file by one page
sleep	sleep (seconds)
test	test file exist or not
vi	text editor
zcat	compress or expand files

## Network

Command	Description
ftp	
ifconfig	set network ip address
netstat	display network status
ping	ping to test network
route	routing table manager
telnet	
tftp	
tracerout	trace route

## Process

Command	Description
kill	kill process
ps	display now running process

## Other

Command	Description
clear	clear the terminal screen
date	print or set the system date and time
dmesg	dump kernel log message
du	estimate file space usage
env	run a program in a modified environment
free	display system memory usage
gzip, gunzip	compress or expand files
halt	halt the server
hostname	show system's host name
mknod	make device node
reboot	reboot / power off/on the server
stty	to set serial port
zcat	dump .gz file context

## Moxa Special Utilities

Command	Description
kversion	show kernel version
upramdisk	mount ramdisk
downramdisk	unmount ramdisk
ipset	configure and save network setting